



System Update

Health & Support

Hardware Settings



Keyboard: Top-row

The top row of keyboard provides:



Special function F1-F12 function

You can access special function by pressing Fn and the keys on the top row.

Advanced Settings

Fn Key and Ctrl Key Swap

Swap the function of the Fn and Ctrl keys in the lower left corner of your keyboard.

If you prefer to have the lower left key as a Ctrl key instead of Fn key, you can swap the functions of these two keys.

Swap Function.

